




INSTRUKCJA INSTALACJI REGEROWANYCH WKŁADÓW ATRAMENTOWYCH

Należy zwrócić uwagę, aby głowica drukująca oraz jeden z wkładów atramentowych zostały zamontowane razem. Nie wyrzucaj głowicy drukującej dopóki nie użyjesz 3 wkładów atramentowych.


GŁOWICA DRUKUJĄCA

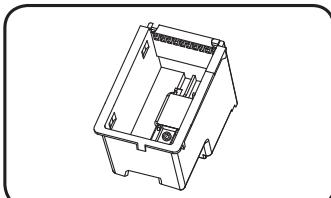


CZARNY

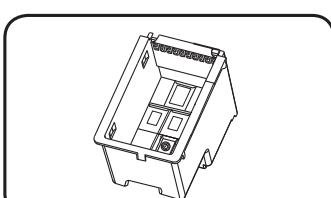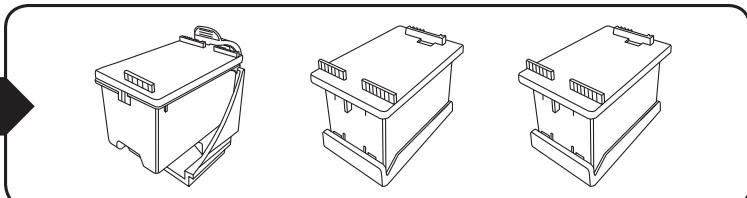

KOLOR

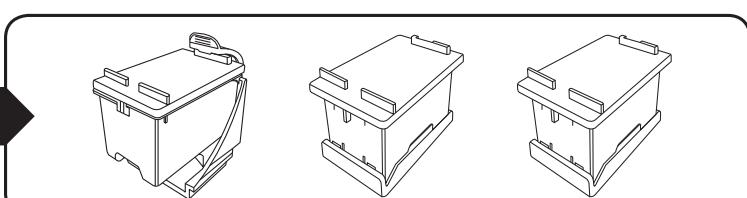


PIERWSZE UŻYCIE

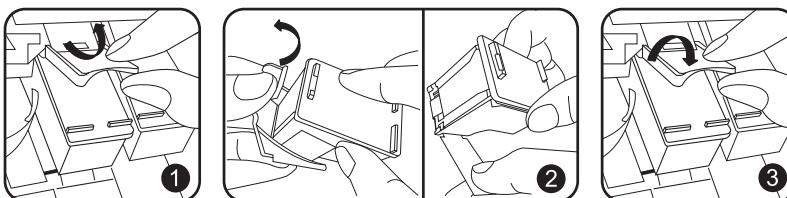

1. Usuń zużyty kartridge z drukarki.
2. Zdejmij zabezpieczenia z głowicy oraz usuń żółtą tasiemkę.
3. Zainstaluj w drukarce nowy pojemnik z tuszem i głowicą.

KOLEJNE UŻYCIE

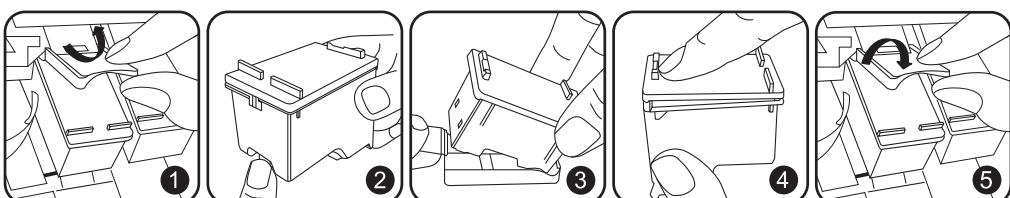


ZALECENIE: kartridge należy wymienić gdy drukarka pokazuje niski poziom atramentu. Poziom ten zostanie zapamiętany przez drukarkę.

1. Wyjmij pusty kartridge z drukarki.
2. Naciśnij od dołu przycisk w celu wyjęcia pustego pojemnika z głowicy. Nie wyrzucaj głowicy drukującej - użyjesz jej ponownie.
3. Zdejmij zabezpieczenie z nowego pojemnika z atramentem.
4. Włóż nowy wkład do głowicy. Użyj chusteczek, aby przeczyścić głowicę drukującą.
5. Zainstaluj w drukarce głowicę zawierającą nowy pojemnik z tuszem.

W przypadku instalacji produktu regenerowanego mogą pojawić się następujące komunikaty:

INSTALUJESZ WKŁAD REGENEROWANY

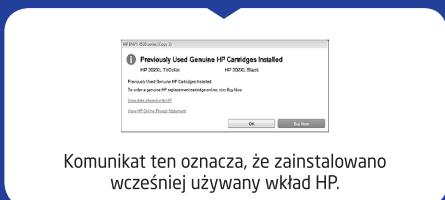


Komunikat ten oznacza, że zainstalowano wcześniej używany wkład HP.

NISKI POZIOM ATRAMENTU



Aby zachować najlepszą jakość i ciągłość drukowania zalecamy wymienić tusz.






TUSZ JEST ZUŻYTY

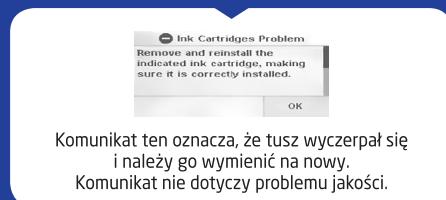


Komunikat ten oznacza, że tusz wyczerpał się i należy go wymienić na nowy. Komunikat nie dotyczy problemu jakości.

INSTALLATION GUIDE FOR REMANUFACTURED INKJET CARTRIDGES

Notice: Please be noticed the reusable print head and one of the ink cartridges have been assembled together. Do not throw away the printer head until 3 pack cartridges used up.

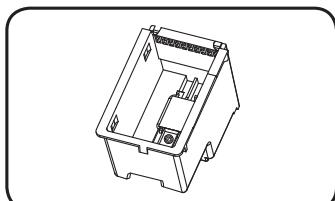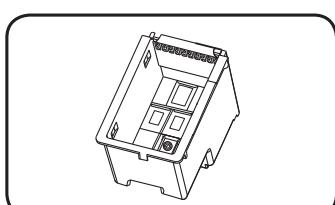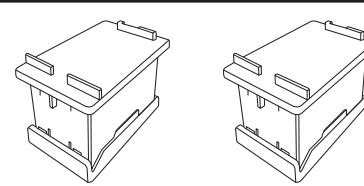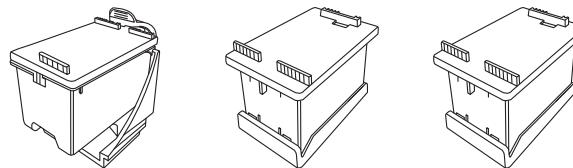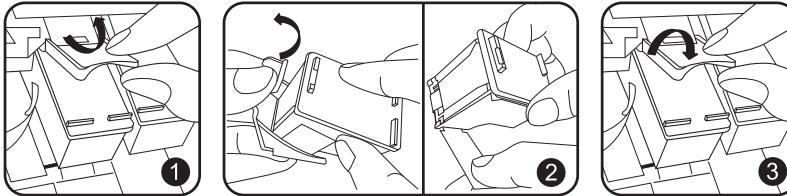REUSABLE PRINT HEAD**BLACK****COLOR****PACK CARTRIDGES****THE FIRST TIME YOU USE THIS PRODUCT**


1. Remove the cartridge from the printer when it used up.
2. Open the print head cover and tear off the yellow sealing.
3. Install the new ink cartridge with print head into the printer.

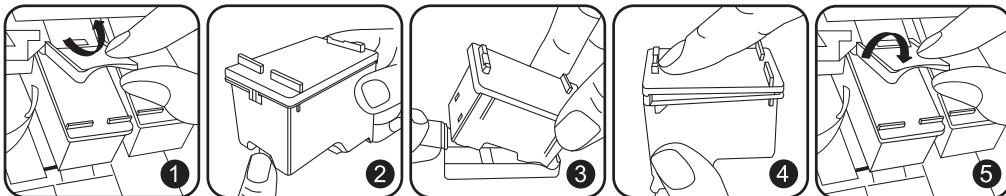THE SECOND/THIRD TIME YOU USE THIS PRODUCT

Recommendation: To maintain the best printing performance, it is better to change the pack cartridge when the ink volume of cartridge is low (There will be a reminding on the printer).

1. Remove the cartridge from the printer when it used up.
2. Press the 'push' button to take out the spent pack cartridge.
The print head can be reusable, pls do not throw it away.
3. Remove the cover of a new cartridge.
4. Properly reassemble the new cartridge and the reusable print head.
To use the tissue to wipe and clean the print head.
5. Install the new ink cartridge with print head into the printer.

Our products are remanufactured products. Please be noticed when the remanufactured cartridge is installed, the printer prompt is different from original cartridge's.

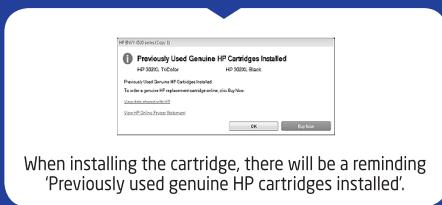INSTALL REMANUFACTURED CARTRIDGE

When installing the cartridge, there will be a reminding 'Previously used genuine HP cartridges installed'.

CARTRIDGE LOW

To maintain the best printing performance, it is suggested to change the pack cartridge when the ink volume of cartridge is low.

CARTRIDGE USED UP

When the printer prompts "Ink Cartridges Problem" or "Cartridges Error" after "Cartridge Low" prompt, it indicates that the cartridge used up and you need to replace a new one. It is not quality problem.